


Burlington tailor

Cut a PPE Gown



Check the material size

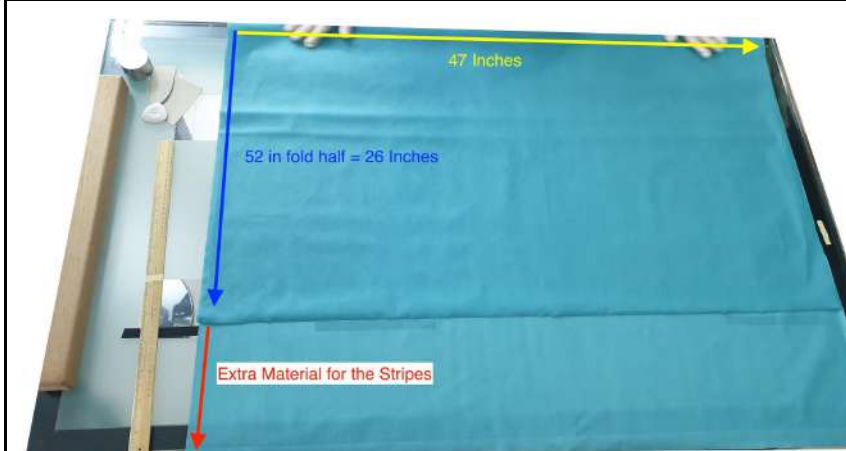


Fold half of 52 inches



Cut the access material

Burlington tailor


Cut a PPE Gown

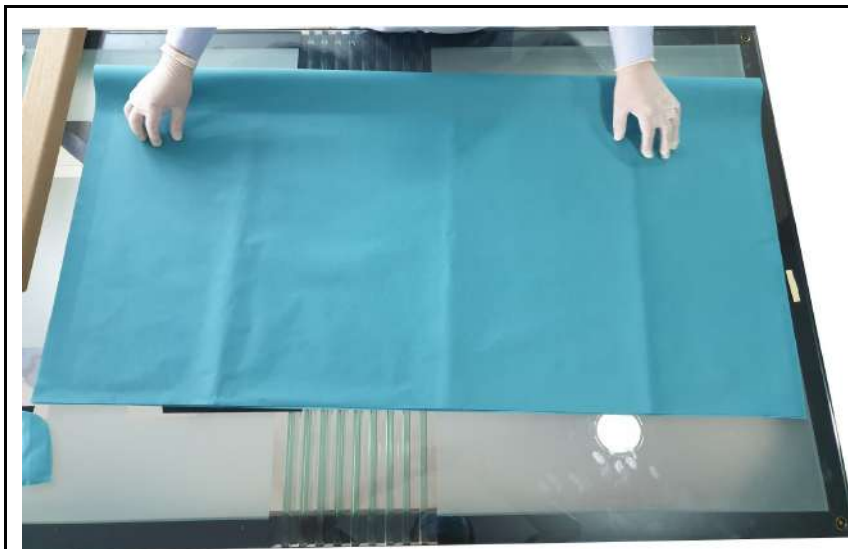

47 x 26 (2)




Cut the collar and arm hole

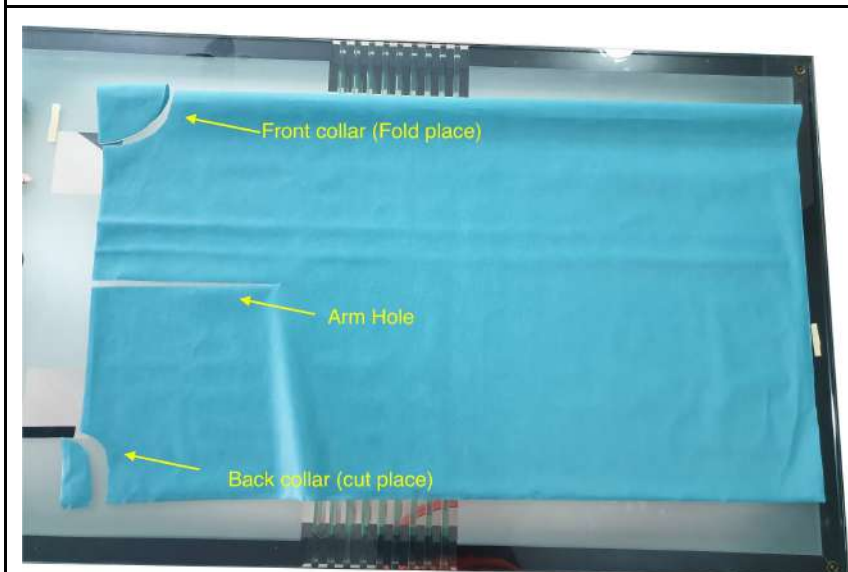


After Cut

Burlington tailor


Cut a PPE Gown

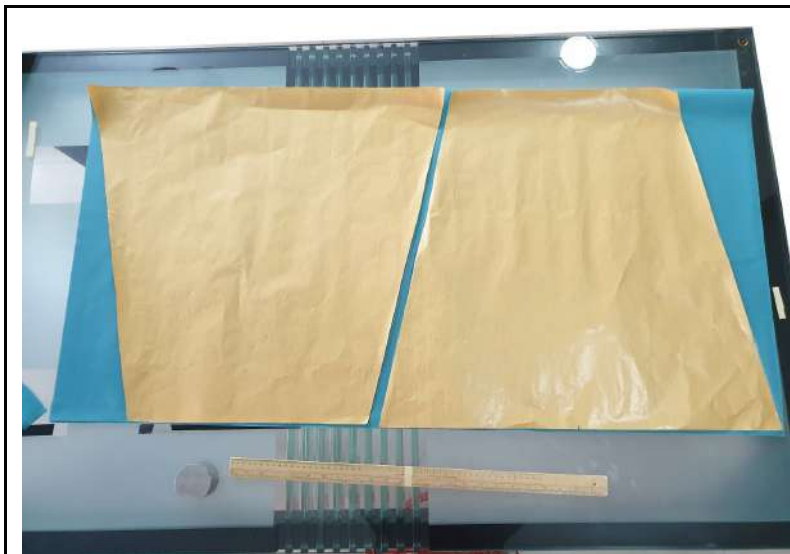

Another pieces of Material
47 x 26 (2)
Cut 2 pair of sleeves in once

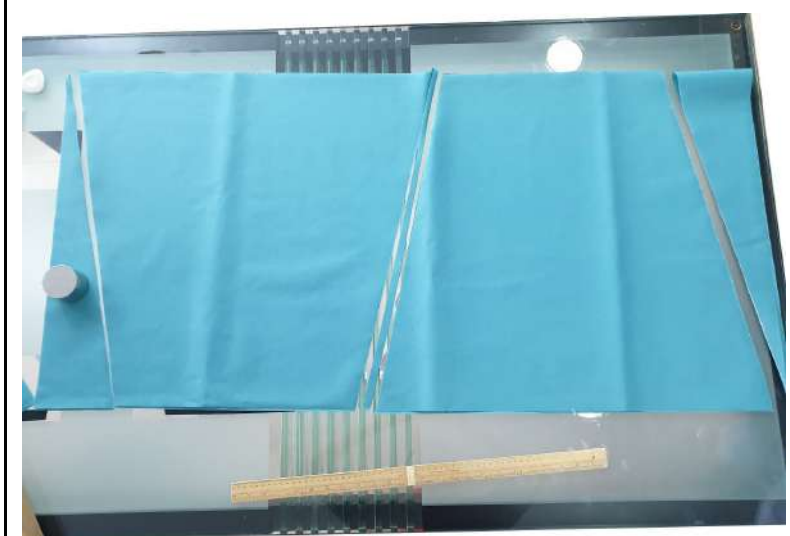


After cut

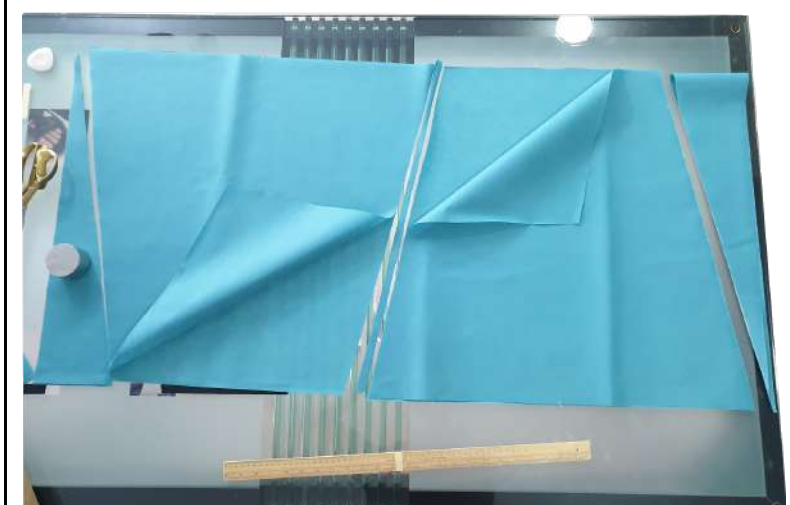

Total 2 Pairs

Burlington tailor

Sew a PPE Gown

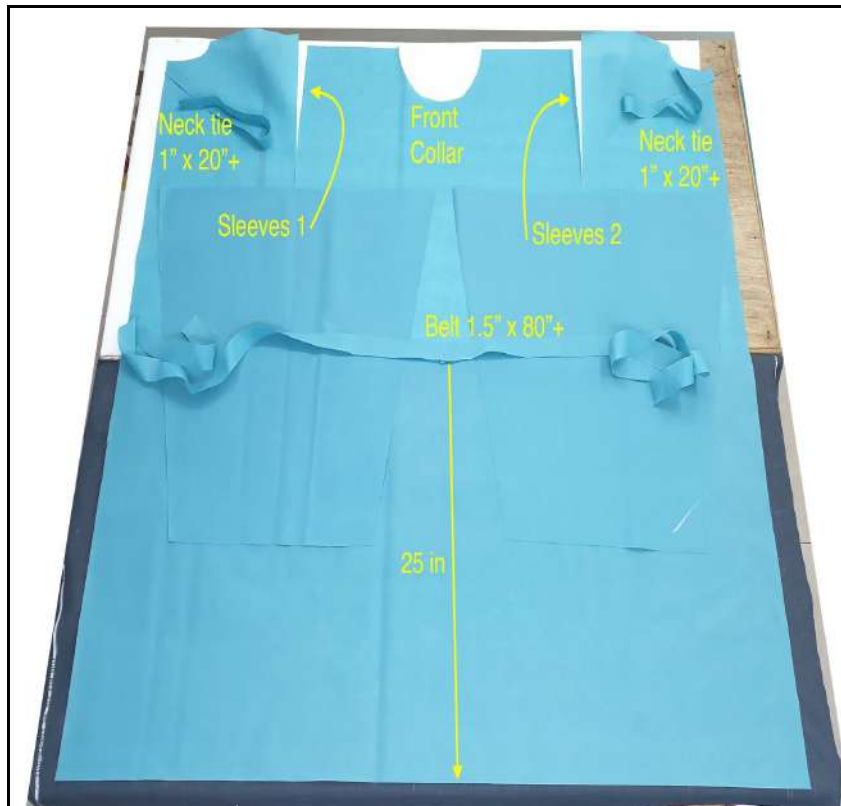

The location of each parts



Sew the rubber, 6 in

Burlington tailor

Sew a PPE Gown



Sew the sleeves at the arm hole
(SL to SL)
Sew the shoulder together
(SH to SH)



After sew shoulder and sleeves
Inner View



After sew shoulder and sleeves
Inner View

Burlington tailor

Sew a PPE Gown



Sew the Belt at OUTSIDE
(under the front collar)



Neck tie next to back collar

Burlington tailor

PPE Gown finishing



Burlington tailor

PPE Gown finishing

