Burlington tailor

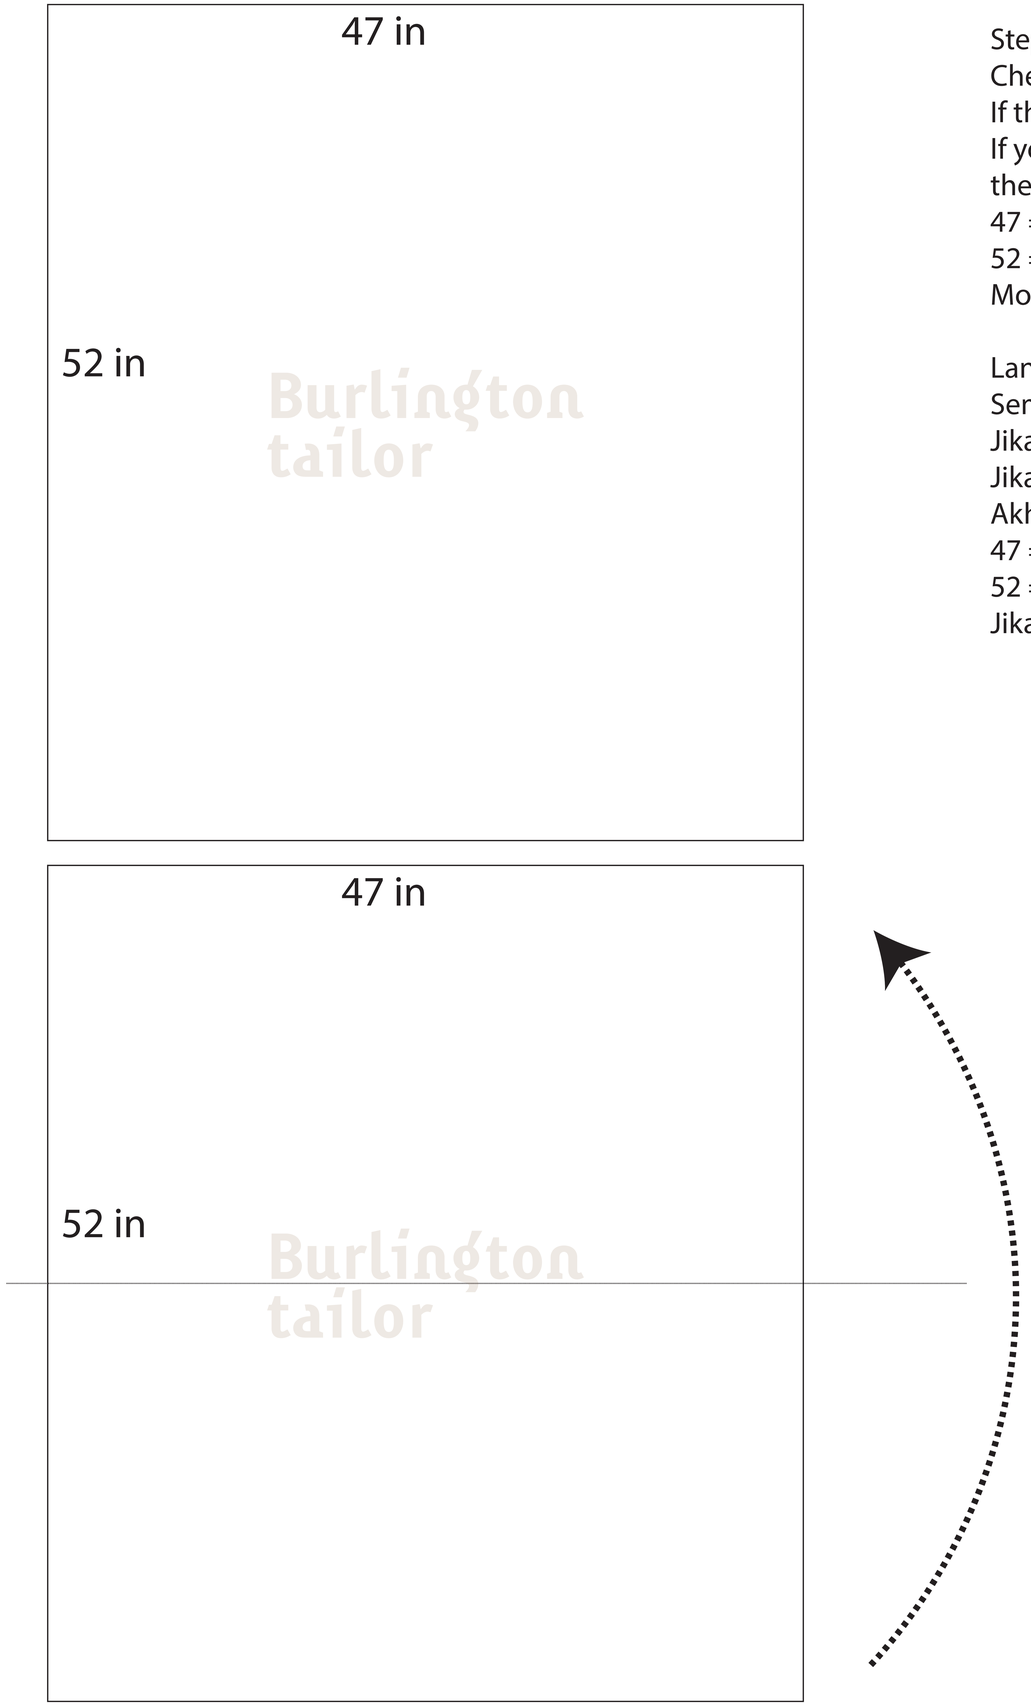

Step 1
Check your fabric Width
If the fabric width between 50 to 53 in width, Cut every pieces fabric for 47 in
If your fabric is 46-48 width, Cut every pieces fabric for 52 in
the point is getting fabric with size of 47 *52 in (+- 1 in),
47 = Body Length
52 = Body Width
More than 52 can use that as stripe (part 3)

Langkah 1
Seman lebar kain
Jika Lebar 51 - 53 in, potong kain 47 in
Jika Lebar 46-48 in, potong kain 52 in
Akhirnya nak dapat kain 47 x 52 (+ - 1 in)
47 = Panjang Badan
52 = Lebar Badan
Jika lebih 52 in, boleh guna untuk tali (langkah 3)

步骤1
检查布宽度，
如果布宽 51-53 寸，剪47寸的布
如果布宽 46-48 寸，剪52寸的布
最总的目的是得到 47 x 52 的布 （+- 1寸）
47 = 衣身
52 = 衣宽
如果超过52寸，可以考虑用余部做调节带（步骤3）

Step 2
Fold half according the 52 side.
so you facing a fabric of 47 x26(2)
This 47 x26(2) fabric will able to cut as either
- 1 x Body of Gown or 2 x Sleeves of Gowns (2 pairs)
so, 3 pieces fabrics of 47 x26(2) is make it to 2 Gowns

Langkah 2
Lipat kain separuh di sisi 52 in
you akan dapat kain 47 x26(2)
Satu 47 x26(2) boleh diguna untuk
- 1 x Badan ATAU 2 x tangan (2 pasang)
begitu, 3 keping kain 47 x26(2) boleh jadi 2 baju.

步骤2
在52寸的地方对折
这样你的布是呈现 47 x 26(2)
1 片 47 x 26(2) 的布可以用于
- 1 个衣身 或者 2 件衣服的袖子（一共2对）
所以， 3片47 x 26(2) 的布 可以缝制成 2 件衣

3) Badan Body 衣身

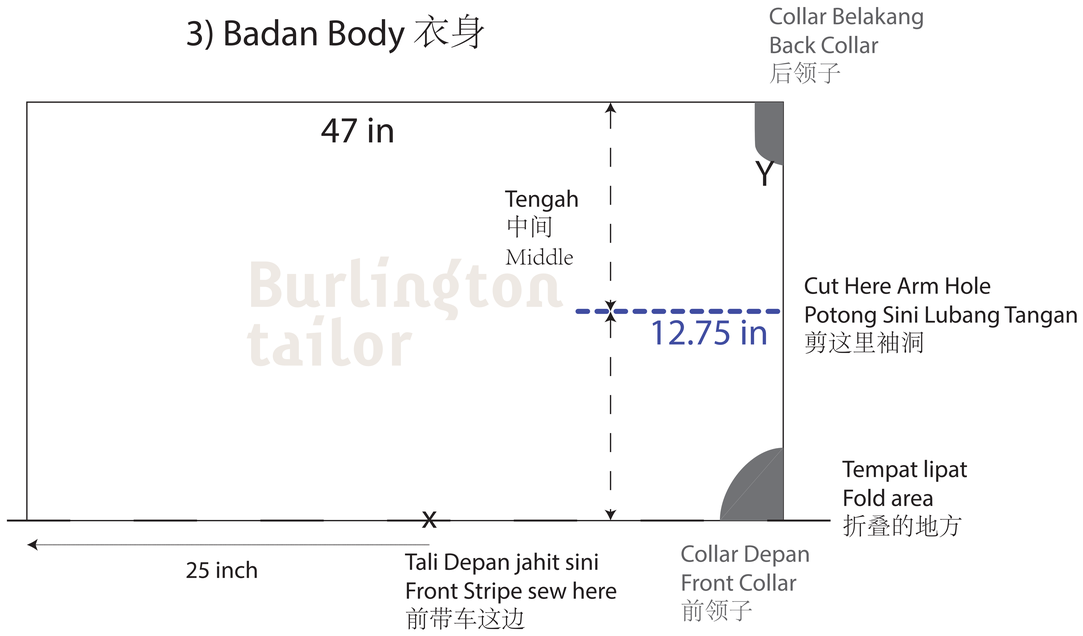

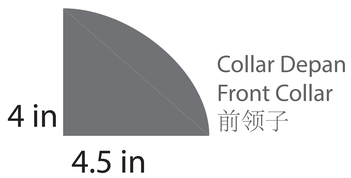

4) Tangan Sleeves 袖子

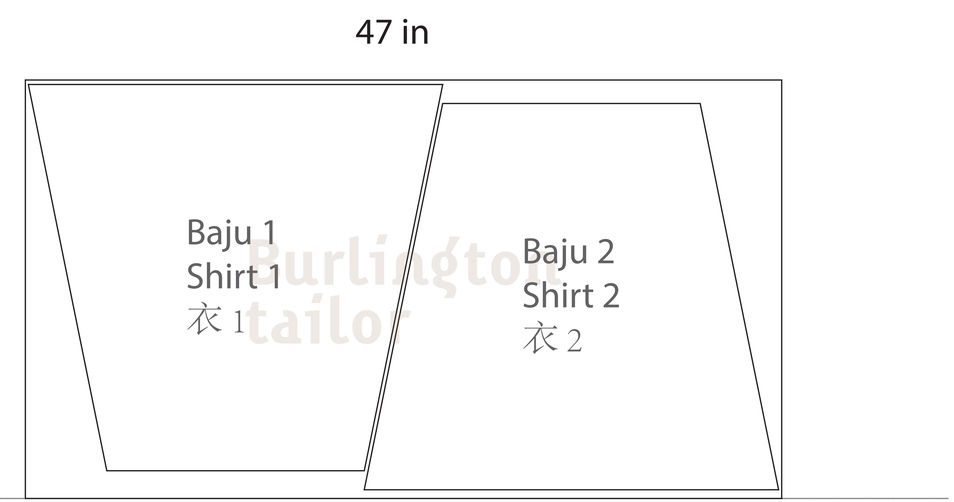

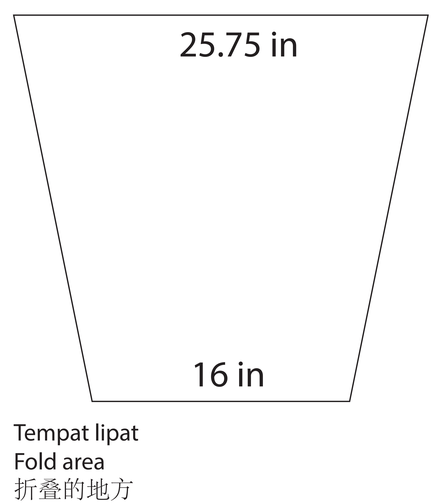

Burlington tailor

Step3
Cut the Back collar at the side that been cut
Cut the Front collar at the side that been fold
Cut the Arm hole area at the Middle of the fold material, and the deep of the arm hold is 12.75
Mark at 25 in (from bottom) , the front body stripe will sew at this point. (X mark)
Sew the Collar stripe at Location Y (both side)
Body Strip = 1.5 in x 80+ in (the length can longer, joint 2 stripe to 1) ,
Collar stripe = 1 in x 20+ in

Langkah3
Potong kolar belakang di bahagian kain yang telah dipotong
Potong kolar depan di sisi yang dilipat
Potong lubang lengan di bahagian tengah kain yang lipatan, dan panjangnya 12.75 in
Tandakan pada 25 in (dari bawah), tali badan depan akan menjahit di tempat ni. (tanda X)
Jahit tali leher di tanda Y (kedua dua sisi)
Tali Badan= 1.5 in x 80+ in (Boleh Panjang, Boleh gabung)
Kolar tali = 1 in x 20+ in

步骤3
在被剪裁的一侧上方剪裁后领
在折叠的一侧上方剪裁前领
在折叠后面料的中间处剪开袖洞，袖洞的深度为12.75 寸
在25英寸处（从底部开始）标记，此处将缝前腰的带。（x标）
在 Y 标记处，缝上领子调节带 （Y标）
前腰的带= 1.5 寸 x 80+ 寸 （可以更长，接布）
领子的带 = 1寸 x 20+ 寸

Step4
Cut the sleeves according the size
Upside down the sleeves to cut 2 pairs in one fabric of 47 x26(2)

Langkah4
Potong lengan dengan size yang berikut
Terbalik lengan supaya dapat 2 pasang dalam sehelai kain size 47 x26(2)

步骤4
根据提供的尺寸，裁剪袖子
调转袖子以便可以在一片47 x 26(2)的面料上 获得2对袖子

Actual Size Printable block

Collar Depan
Front Collar
前领子

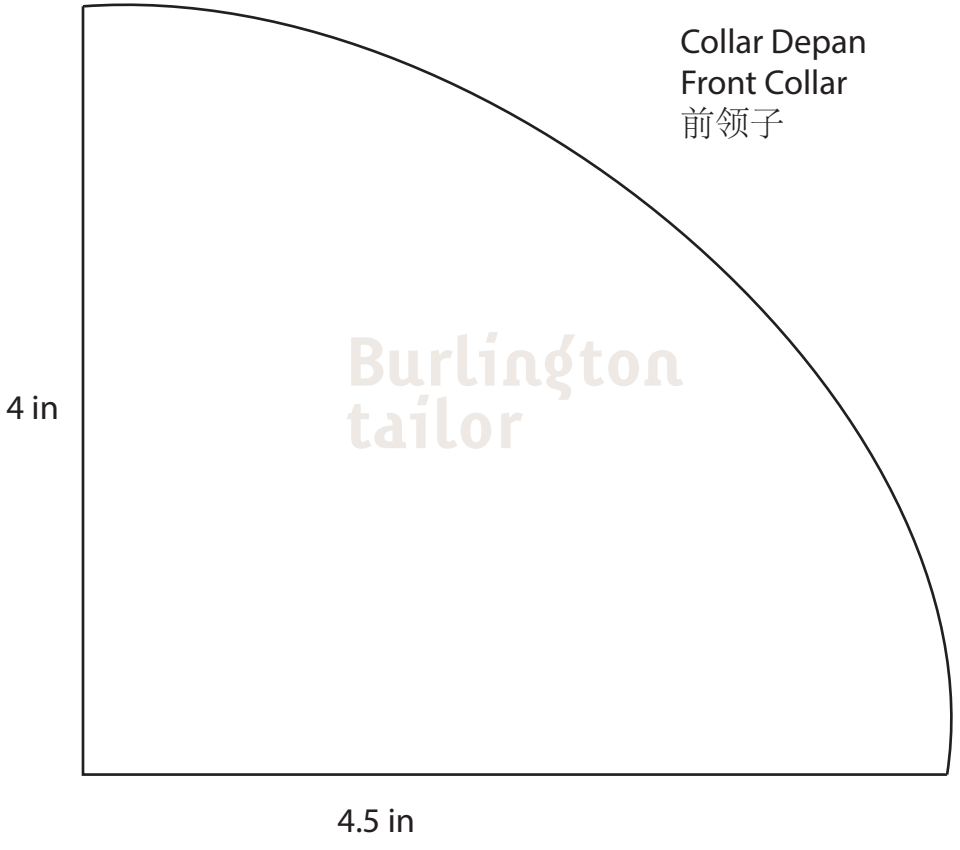

Burlington tailor

Collar Belakang
Back Collar
后领子

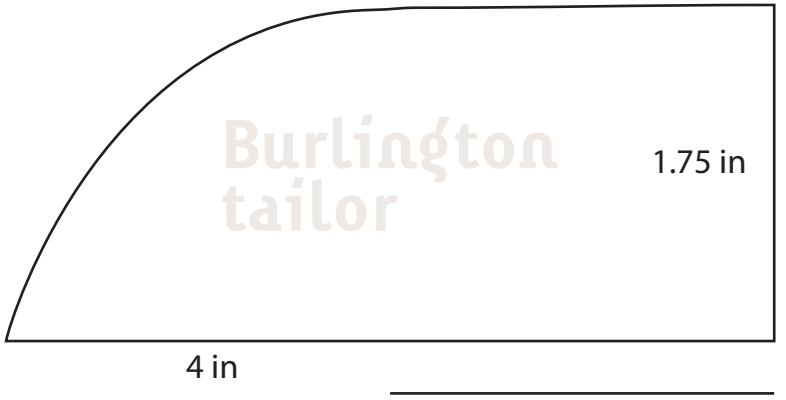

Burlington tailor